Foundation Series Webinar
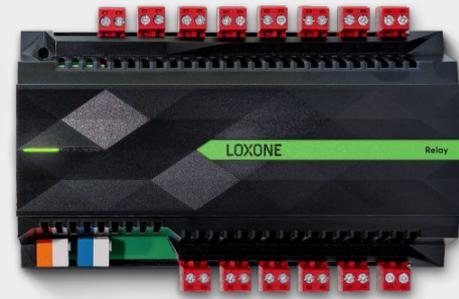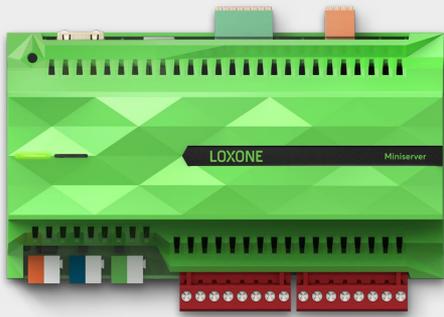
Adding and Replacing Extensions, Pairing Tree and Air Devices
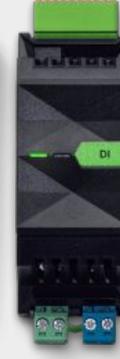
Create
Automation

LOXONE

Agenda Points

- Connecting to the Demo Case
- Searching for and adding Extensions
- Adding Extensions not present
- Adding Tree and Air devices
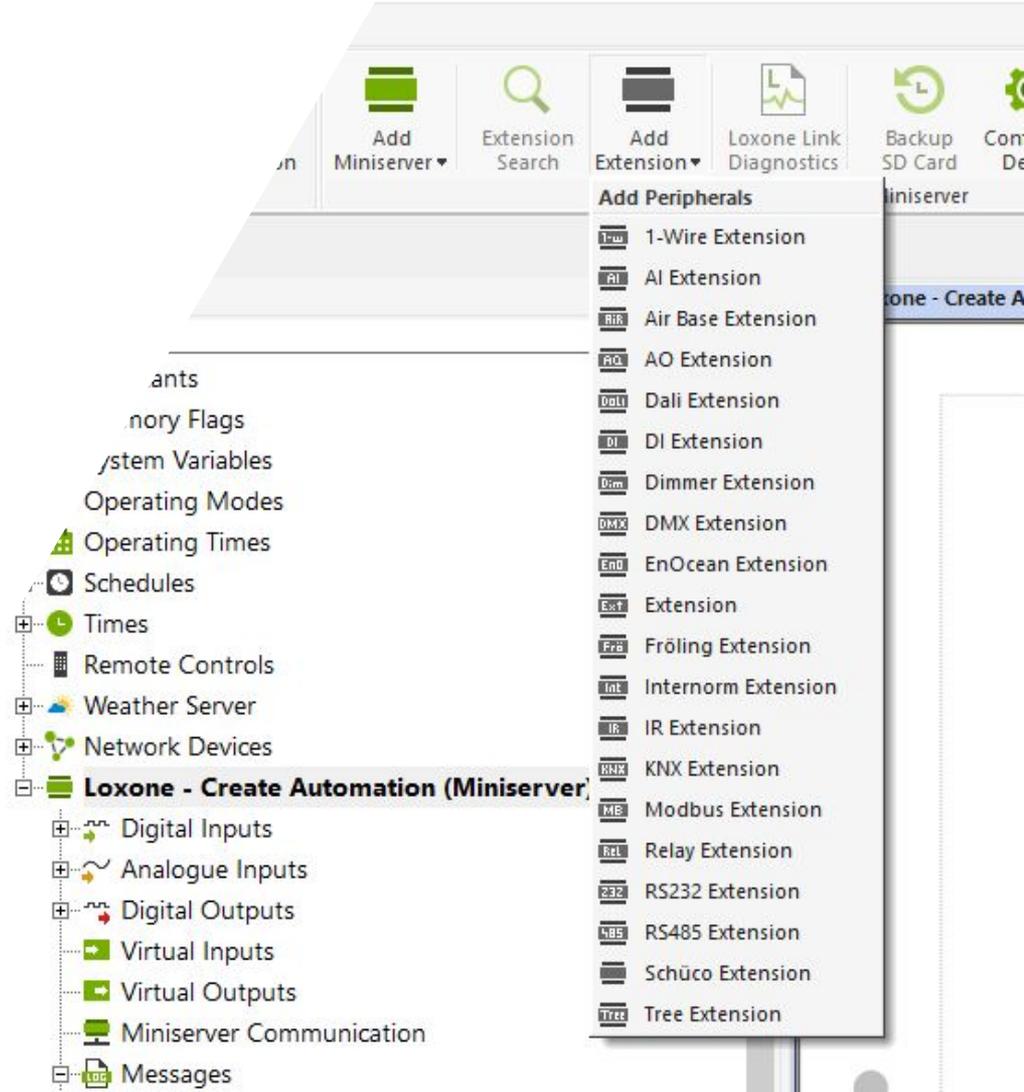- Pairing devices from the Demo Case
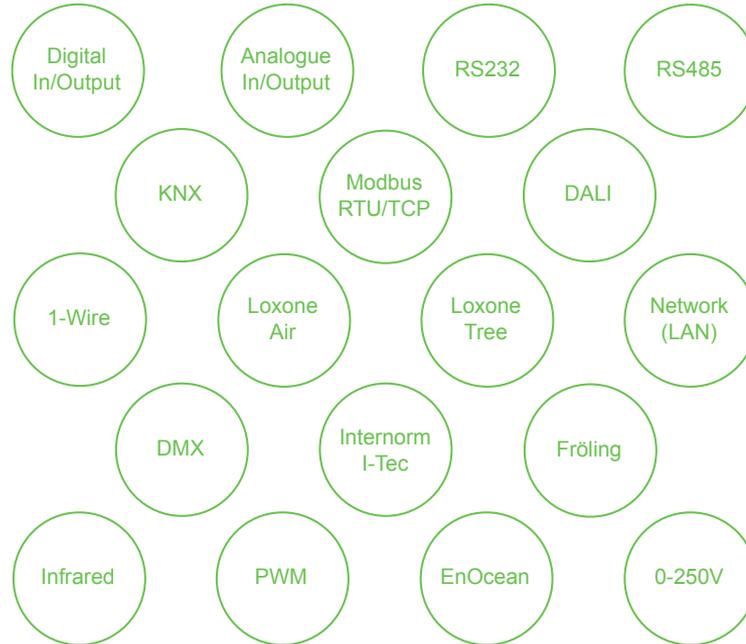
Loxone Extensions

Extensions

For additional interfaces, we have a wide range of Extensions. They further enhance the functionality of the already-impressive Miniserver to create an unparalleled ecosystem. This makes Loxone infinitely flexible.

The size of a Loxone installation and the associated control requirements ultimately determine which extensions you use to enable intuitive, powerful automation in a home or commercial building.
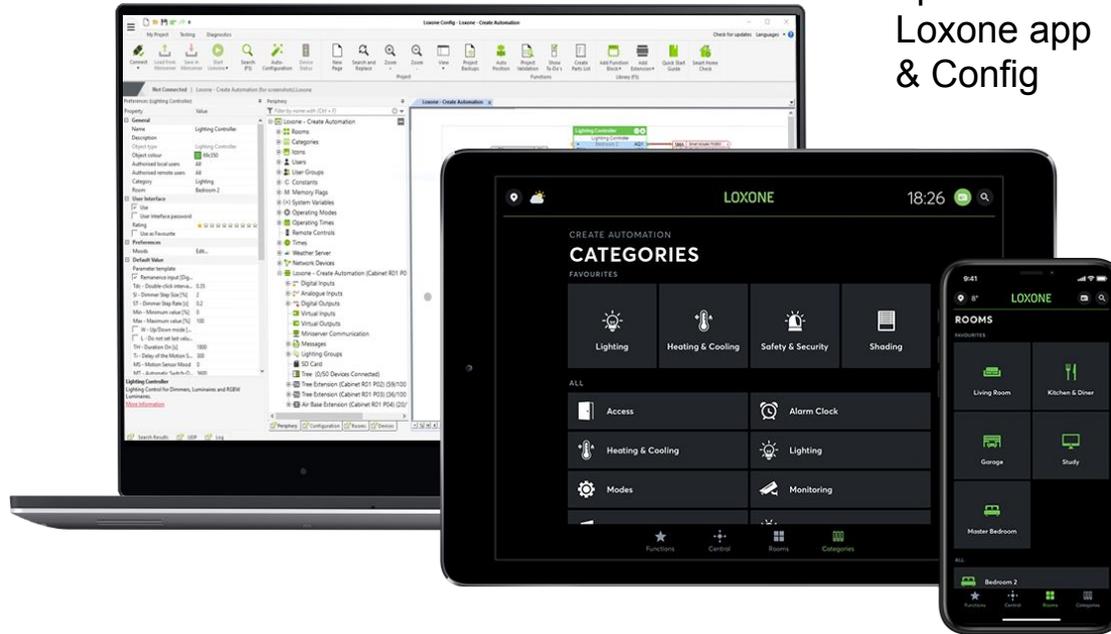
Topic Highlights

- Extensions, as well as Tree and Air peripherals can be added without physical hardware
- When adding or pairing physical hardware these will identify themselves.
- You can have up to 30 Extensions per Miniserver.
- You can have 50 Tree devices per Tree branch, each Tree Extension contains 2x branches
- You can have 128 Air devices per Air Base Extension

Digital In/Output

Analogue In/Output

RS232

RS485

KNX

Modbus RTU/TCP

DALI

1-Wire

Loxone Air

Loxone Tree

Network (LAN)

DMX

Internorm I-Tec

Fröling

Infrared

PWM

EnOcean

0-250V

Powerful Software

Ongoing free updates for the Loxone app & Config

Welcome Package

For the perfect start!

Create Automation

LOXONE

loxone.com

Megan Jenkins
Business Development

01183 130 140
megan.jenkins@loxone.com

Create Automation

LOXONE